



**TL335LW**

**UPRIGHT LARDER FRIDGE**

# Instruction Manual

**Please read these instructions carefully before use and retain for future reference.**

**Before switching on your appliance – Always check for any damage that may have been caused in transit.**

## CONTENTS

Important Safety Instructions .....	3
Specification.....	4
Appliance Overview.....	4
Installation .....	5-6
Operating Instructions.....	6-7
Cleaning and Maintenance.....	7-8
Fuse Replacement .....	8
Trouble Shooting Guide.....	9
Disposal Information .....	9
Terms and Conditions and Warranty Information..	10-11

## IMPORTANT SAFETY INSTRUCTIONS

**Read and follow all of the instructions even if you feel you are familiar with the product, and find a place to keep this manual handy for future reference.**

**Important:** This product is intended for domestic use only, for food refrigeration and frozen food storage only.

When using electrical appliances, basic safety precautions should always be followed:

1. Do not operate the appliance with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
2. Check the voltage of the appliance matches the household voltage, which is located on the rating label.
3. Use of an extension cord is not recommended with this product.
4. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are recommended by the manufacturer.
5. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
6. Cleaning and user maintenance shall not be made by children
7. Keep the appliance and its cord out of reach of children.
8. Children shall not play with the appliance.
9. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
10. Always unplug the appliance before attempting to move.
11. Always unplug the appliance before cleaning. When disconnecting from the electricity supply, pull the plug, not the cord.
12. This product is for indoor use only.
13. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
14. Always keep the ventilation openings clear of obstruction. Should they become blocked, clear them straight away.
15. The refrigerant of this product is R600a which is flammable. Ensure when moving the appliance or during installation that the cooling system does not get damaged.
16. **Important:** Always allow 12 hours before turning on the appliance to allow coolant gases time to settle after the appliance is in place.

**WARNING:** The appliance is heavy and care is needed when unpacking and moving it. Get extra help and only hold the appliance by the casing – never hold by the door or the trim.

 
**WARNING:** Risk of child entrapment.

Before disposal of the old appliance, make sure that any locking mechanisms have been broken off, doors have been removed but shelves have been left in so that children cannot easily climb inside. Also remove the plug so the appliance is unusable.

## Specification

Supplier Name / Trade Mark	Statesman
Model Number	TL335LW
Category Type	Upright Larder
Energy Efficiency Class	A+
EU Eco-Label Award	N/A
Annual Energy Consumption	135kWh/annum
Freezing Capacity	N/A
Fridge Storage Volume (Litre) and Applicable Star Rating Compartment	335L
Freezer Storage Volume (Litre)	N/A
Applicable Star Rating Compartment	N/A
Refrigeration System (Frost Free, Static, Totally No Frost)	Static
Temperature Rise Time	N/A
Climate Class	ST
This appliance is intended to be used at an ambient temperature between “16” (lowest temperature) °C and “38”(highest temperature) °C	
Noise Emission (dB)	42dB
Built-in Appliance	N/A
Wine Storage Appliance	N/A
Voltage (V)	220-240V~
Wattage Power (W)	85W
Frequency (Hz)	50Hz
Power Source	AC

## Appliance Overview

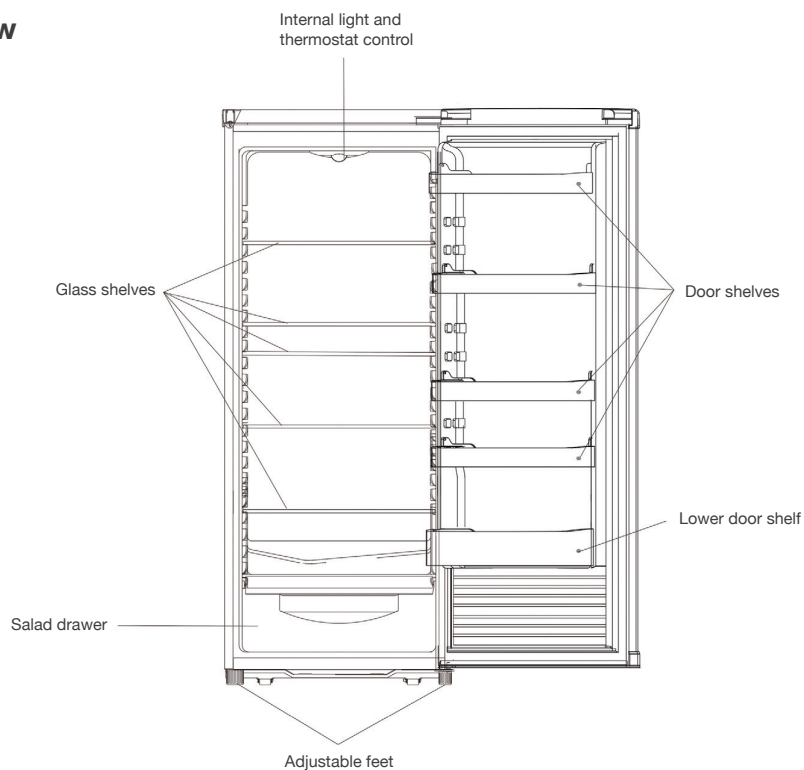

## INSTALLATION

### Location and Air Circulation

The appliance must stand vertically on a flat, even surface, to level the appliance use the levelling feet by turning them until the appliance is as level as possible.

Install the appliance in a well ventilated room with an average room temperature of between 16°C and 38°C. The appliance is supplied with rear spacers, these are to be screwed to the rear of the appliance to ensure enough ventilation at the rear of the appliance. The appliance should not be placed near to sources of heat e.g. cookers, radiators, direct sunlight or in any unheated rooms e.g. garages, or outhouses, as extreme temperatures will affect the performance of your appliance.

Do not expose the appliance to damp conditions, open air or rain.

Do not lift the appliance by the pipes or the door when moving.

Never place the appliance in a wall recess, fitted cabinet or furniture as this will not allow adequate ventilation and cause a potential fire hazard. Allow 50mm of space at the sides of the appliance. Never push the appliance against the wall, leave at least a 15mm gap. If the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the appliance and the wall unit must be at least 100mm.

Providing you follow the recommended ventilation requirements you will:

 
 
 
- Increase the life of the appliance.
- Minimise the risk of condensation on the outside of the appliance.
- Minimise operating noises caused by vibration.

### Door Fitting

The appliance door can be fitted to open to either the left or the right depending on its location.


Ensure the appliance is unplugged and empty.

1. Unscrew hinge cover (fig1).
2. Open door and unscrew the top hinge (fig2).
3. Remove door from appliance and store in safe place.
4. Remove the cover and screws on the left side and re-fit on the right side (fig3).
5. Remove the hinge cover (fig4).
6. With help, carefully lie down the appliance and remove the two levelling feet (fig5).
7. Unscrew the door hinge and left foot base. Caution! If there is a screw on the left front cover then remove first before installing hinge.
8. Unscrew and remove bottom hinge pin, turn bracket over and replace (fig5).

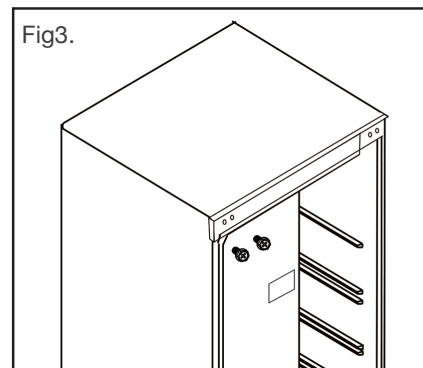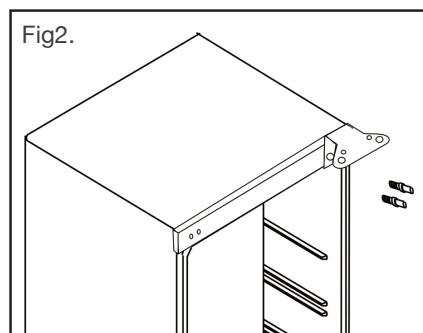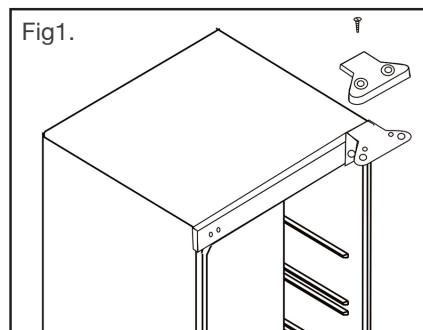

9. Install hinge on left side and foot base on the right side. Refit the levelling feet with their original parts (fig6).
10. Unscrew top hinge pin and re-fit on the left side (fig7).
11. Stand the appliance up and put the door on the bottom hinge. Re-fit the upper hinge with the door. Before tightening check all the seals, if all sealed properly then the hinge screws can be tightened.

### Reverse Door

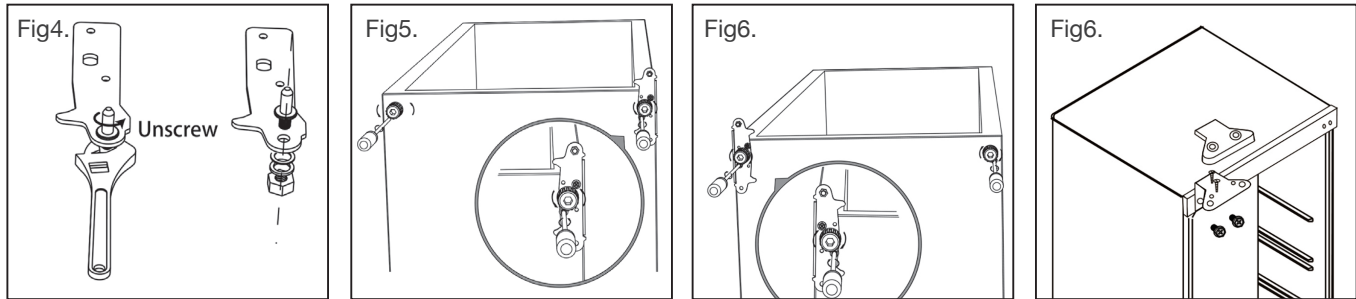 

**Note:** Check that the door is aligned horizontally and vertically and that the seals are closed on all sides before tightening the bottom hinge. Re-adjust the levelling feet to minimise operation noises caused by vibration.

## OPERATING INSTRUCTIONS

### Before using your Appliance

- Allow 12 hours before turning on the appliance to allow coolant gases time to settle after the appliance is in place. Failure to do this may result in damage to the appliance and such damage is not covered by the guarantee.
- Before placing food in the appliance turn on and wait 24 hours, this is to make sure it is working correctly and also to allow for the optimal internal temperature to be reached. The interior of the appliance needs to be cleaned prior to use by wiping with a soft cloth and using warm water. Wipe the appliance completely dry before replacing any shelves or salad drawers.

### Using your Appliance

- Once dry, plug the appliance into the mains socket.
- Adjust the temperature control which is located inside the appliance to 4, this is the correct setting to use in a room with an average ambient temperature of 20°C.
- Allow the appliance at least 24 hours before storing any food inside to allow for sufficient cooling temperature to be reached.

### Adjusting the Temperature

The ideal internal temperature of your appliance should be between 0°C to 5°C. This is regulated by the temperature control located internally at the top of the appliance. There are 6 settings on the temperature control, with position 6 being the coldest setting, position 1 being the warmest setting and 0 being the off position.

The temperature control should be set to position 4 when operating at normal room temperature (between 16°C and 38°C). Avoid setting the thermostat too high, as this may reduce the temperature to a point where some foods begins to freeze. If this happens turn down the thermostat slightly.

The temperature in the appliances compartment can be monitored by using a fridge thermometer. DO NOT USE a Mercury filled thermometer, as a breakage would cause a health hazard. Your appliance must NOT be placed in a room where the temperature goes below 16°C or above 38°C for prolonged periods, as the internal appliance temperature will not be maintained.

### **Using your Appliance Efficiently**

- Avoid opening the door for long periods or unnecessarily.
- To maintain adequate air circulation, do not over fill the appliance.
- Allow hot or warm foods to cool to room temperature before storing in the appliance.

### **Storing Food in your Appliance**

- Pack and store cooked and fresh food separately
- Wrap raw or defrosting meats and poultry in polythene or foil and ensure they are stored below any cooked meats to avoid contamination from any juices that may drip.
- Keep foods covered to help retain moisture and to help prevent odour. Plastic bags, aluminium foil (heavy duty grade), plastic food wrap and containers with lids are ideal.
- Empty left over tinned food into plastic containers. Do not store foods in tins in the appliance.
- Position food in the appliance to allow cold air to circulate freely, making sure that nothing touches the back wall of the appliance.

## **CLEANING AND MAINTENANCE**

Switch off the electrical supply and remove the plug from the mains socket before cleaning.

### **Interior**

1. Remove all food from the appliance and cover to help keep cool.
2. Remove all the shelves and salad crisper carefully from the appliance and wash in warm soapy water with a soft cloth and dry thoroughly. Never replace the shelves or salad crisper into the appliance if wet.
3. Wipe the interior of the appliance with a damp clean cloth. For extra cleaning use a solution of one teaspoon of bicarbonate of soda to one pint of water.
4. Dry the interior thoroughly with a clean cloth and replace the shelves.
5. Plug in and switch on and allow the temperature in the appliance to drop back to an adequate temperature.
6. Replace the food in the appliance.

**NOTE:** Avoid getting water into the electric components of the appliance i.e. the thermostat, as this may damage your appliance.

### **Exterior**

Use a clean, damp soft cloth to wipe the exterior surface of the appliance and dry thoroughly.

**WARNING:** Do not use abrasive cloths, powders, household cleaners, bleach or wax polish to clean the appliance as these can leave a smell in the appliance and can damage the exterior. Use a vacuum cleaner to remove dust from underneath the appliance and from around the compressor which is situated at the back of the appliance, regularly to maintain adequate ventilation. Use caution not to damage the coolant system.

### **Door Seal**

Use a clean, damp soft cloth to wipe the door seal and in between the creases, avoid damaging the door seal as this will affect the performance of your appliance.

## Drainage Channel

The drainage channel must be cleaned regularly to prevent a build-up of impurities; this can be found on the interior back wall of your appliance. Use a damp clean cloth and wipe the channel clean, then use a pipe cleaner or similar flexible object to clean the drainage hole to prevent blockages.

## Going away

If you are going away and do not want to leave the appliance switched on, switch off at the socket and remove the plug from the mains socket ensuring not to pull the cord. Remove any food and follow the cleaning instructions in the “Cleaning and Maintenance” section.

Note: Leave the door ajar as this will prevent odours and mould accumulating in the appliance and will allow the appliance to dry completely.

## Power Cut

In the event of a power cut keep the appliance door closed to maintain the temperature inside.

## Bulb Replacement

The internal Light is LED, it is advised to contact a qualified electrician to replace the bulb.

 
## Operating Sounds

You may notice some unusual noises from your appliance, these are perfectly normal, but you should be aware of them.

The compressor can make a buzzing or humming sound when it is running. This can be louder when the appliance is first switched on but should become quieter in a few months. Gases flowing through the cooling systems can cause gurgling, bubbling or similar sounds. These noises are normal and have become more pronounced since the introduction of CFC free gases. Expansion and contraction of parts inside the appliance can produce a cracking noise as they rapidly change temperature.

## Fuse Replacement

This appliance must be earthed. There are 3 screws on the plug, remove them and open the shell. Take out fuse and replace with a new fuse of the same Amp. Install the shell again and tighten the screws.

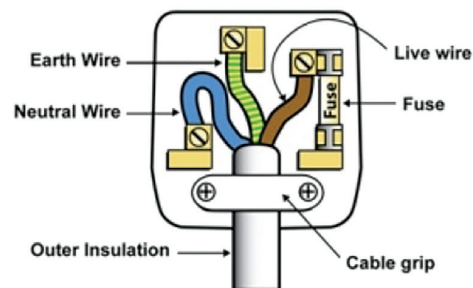



## Troubleshooting

If you are having problems with your appliance, please use our troubleshooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Fault	Possible cause	Solution
Appliance does not work	Temperature regulation knob is set at number "0".	Set the knob at other number to switch on the appliance.
	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
The food is too warm.	Temperature is not properly adjusted.	Please look in the initial Temperature setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Appliance cools too much	Temperature is set too cold.	Turn the temperature regulation knob to a warmer setting temporarily.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and care section.
Side panels are hot.	It's normal. Heat exchange parts are in the sides.	Use gloves to touch sides.

## Disposal

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



## **Statesman Warranty Terms & Conditions**

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on 0844 8485860 or write to us at the following address:

**Customer Service Department  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the serial number and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

## Thank you for choosing Statesman

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. [www.igenix.co.uk](http://www.igenix.co.uk)

To register your product, please complete all sections of the form below and return to us at the following address: Statesman Appliances, Pik-a-Pak Electrical Distributors, 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR.

Alternatively you can visit the Statesman website and complete the form online.  
[www.statesmanappliances.co.uk](http://www.statesmanappliances.co.uk)

### Customer Details:

Title: \_\_\_\_\_ First Name \_\_\_\_\_ Surname: \_\_\_\_\_

Address: \_\_\_\_\_

Post Code: \_\_\_\_\_

Email: \_\_\_\_\_

Telephone: \_\_\_\_\_

### Product Information:

Product Code: \_\_\_\_\_ Product Description: \_\_\_\_\_

Batch Number (Beginning 5): \_\_\_\_\_ Serial Number (If applicable): \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Retailer Name: \_\_\_\_\_

Retailer Location: \_\_\_\_\_

Please tick here to confirm you have read and accept our Terms & Conditions

Please tick here if you DO NOT wish to receive marketing information from us

Customer Signature: \_\_\_\_\_ Date: \_\_\_\_\_



