

**3kW 1.7L Cordless Jug Kettle**



**IG725 I**

Batch code:

**Please read these instructions carefully before use and retain for future reference**

**Before switching on you appliance**

**Always check for any damage which may have been caused in transit**

# CONTENTS

Important Safety Instructions.....	3-4
Appliance Overview .....	5
Operating instructions.....	5-6
Cleaning & maintenance .....	6
Fuse & Mains Plug Replacement .....	6
Troubleshooting.....	7
Disposal Information.....	7
Igenix Warranty .....	8-9

## **SAFETY INSTRUCTIONS**

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underneath the kettle & base) corresponds with the voltage in your home. If this is not the case, contact the retailer and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without water to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, to prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has boiled, avoid contact with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast. Be careful when refilling the kettle when it is hot. Children should be supervised to ensure that they do not play with the appliance.
10. Do not touch the hot surface. Use the handle or the button.
11. Extreme caution must be used when moving an appliance containing hot water.
12. The kettle is for household use only. Do not use outdoors.
13. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
14. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.

15. To disconnect, turn any control to “off” then remove plug from wall outlet.
16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. Do not use the appliance or the attached base for anything other than intended use.
18. The kettle can only be used with the stand provided.
19. If the kettle is overfilled, boiling water may spill out.
20. The appliance must not be immersed.
21. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the boiling cycle.
22. This appliance is intended to be used in household and similar applications such as:
  - a) Staff kitchen areas in shops, offices and other working environments;
  - b) By clients in hotels, motels and other residential type environments;
  - c) Bed and breakfast type environments.
23. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
24. Cleaning and user maintenance shall not be made by children.
25. Keep the appliance and its cord out of reach of children
26. This appliance can be used by persons with reduced physical, sensory or mental capabilities if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
27. Children shall not play with the appliance.

## APPLIANCE OVERVIEW

1. Base
2. Water gauge
3. Body
4. Spout
5. Lid
6. Lid Button
7. Handle
8. On/Off Switch



## OPERATING INSTRUCTIONS

### Before using your kettle

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the max capacity of water once and then discarding the water.

Wipe the surface with damp cloth.

**Note:** The max capacity of kettle is 1.7L.

### Using your kettle

1. Place the unit on the level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button, fill with the desired amount of water, and then close the lid.  
Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX mark or sit below MIN level. Too little water will cause the kettle to switch off before the water has boiled.

**Note:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging in the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the On/Off switch, the indicator will light up. Then the kettle will start to boil the water, once the water has boiled the On/Off switch will turn off automatically. You can shut off the power by lifting the On/Off switch at any moment during boiling water. If you want to boil water again, only press down the On/Off switch to restart the kettle.

**Note:** Ensure that the On/Off switch is free from obstruction and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is open.

5. Lift the kettle from the power base and then pour the water.

**Note:** Operate carefully when pouring the water from your kettle as boiling water may result in severe burns. Do not open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the On/Off switch is pressed down again. The kettle may be stored on the power base when not in use.

**Note:** Always disconnect the power supply when not use.

## Boil Dry Protection

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water to re-boil.

## CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage to the gloss finish.


4. When not in use, the power cord can be stored at the bottom of the appliance.

### Removal of mineral deposits

Your kettle should be descaled regularly to prevent limescale on the interior as this may cause the kettle to operate less efficiently. You can use any household descaler and follow the instructions on the packaging. Alternatively, you may follow the below instructions to use white vinegar.

1. Fill the kettle with 3 cups of white vinegar. Add water to cover the bottom of the kettle completely. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle then fill the kettle with clean water; boil and then discard the water. Repeat several times until the odour of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

## MAINS PLUG FUSE REPLACEMENT

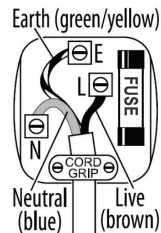

### Fuse Replacement (Class I)

This appliance must be earthed. Remove the central screw on the plug and open the shell. Take out the fuse and replace with a new fuse of the same Amp. Install the shell again and tighten the screws.

# TROUBLE SHOOTING GUIDE

Problem	Possible Cause	Solution
The kettle does not work.	<ol style="list-style-type: none"><li>1. Not properly plugged into the mains wall socket.</li><li>2. No electricity in the mains wall socket.</li><li>3. On/Off switch not turned on.</li><li>4. Safety cut-out activated.</li></ol>	<ol style="list-style-type: none"><li>1. Plug in firmly</li><li>2. Check fuse or breaker.</li><li>3. Push on/off switch to on.</li><li>4. Fill the kettle and allow to cool for a few minutes.</li></ol>
The kettle cuts out before it boils.	<ol style="list-style-type: none"><li>1. Large build up of scale in the kettle.</li></ol>	<ol style="list-style-type: none"><li>1. Use a descaling agent to clean the kettle.</li></ol>
Kettle scales up quickly.	<ol style="list-style-type: none"><li>1. You live in a hard water area.</li></ol>	<ol style="list-style-type: none"><li>1. Regularly de-scale your kettle.</li></ol>

## DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department**  
**38 Bluestem Road, Ransomes Europark**  
**Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code beginning '5' and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.





## Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**

To register your product, please complete all sections of the form below and return to us at the following address: Igenix, 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR.

Alternatively you can visit the Igenix website and complete the form online.

### Customer Details:

Title: \_\_\_\_\_ First Name \_\_\_\_\_ Surname: \_\_\_\_\_

Address: \_\_\_\_\_

Post Code: \_\_\_\_\_

Email: \_\_\_\_\_

Telephone: \_\_\_\_\_





# **igenix**

**38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR**

**Tel. 01473 271 272**

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.