

# IGENIX

## 800W Microwave Oven

### Model Number: IG2980

#### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

1. Do not attempt to operate this oven with the door open, since open door operation can result in harmful exposure to microwave energy. It is important not to tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door is closed properly and that there is no damage to the –
  - a) Door (bent),
  - b) Hinges or latches (broken or loose),
  - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

#### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed.

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

5. To reduce the risk of fire in the oven cavity: When heating food in plastic or paper container, check the oven frequently to the possibility of ignition. Remove wire twist-ties from paper or plastic bags before placing bag in oven. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
6. **WARNING: Liquid or other food must not be heated in sealed containers since they are liable to explode.**
7. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
8. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
9. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
10. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
11. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
12. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
13. Utensils should be checked to ensure that they are suitable for use in microwave oven.
14. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
15. Do not place metallic objects in the microwave oven, e.g. metal containers, crockery with metallic finish or trimming, cutlery or skewers.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

18. The list (below) is a general guide to help you select the correct utensils.

Cookware	Microwave
HEAT RESISTANT GLASS	YES
NON-HEAT RESISTANT GLASS	NO
HEAT RESISTANT CERAMICS	YES
MICROWAVE SAFE PLASTIC DISH	YES
KITCHEN PAPER	YES
METAL TRAY	NO
METAL RACK	NO
ALUMINIUM FOIL / FOIL CONTAINERS	NO

#### INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.

6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

#### ELECTRICAL CONNECTION


Ensure your supply is rated at 220~240V and 50HZ before operating the appliance. This microwave is fitted with a plug incorporating a 13 amp fuse. In addition this appliance must be earthed or connected to an earthed supply. In the event of the fuse needing replacement, then a 13 amp fuse approved by ASTA to BS1362 MUST be used.

**IMPORTANT:** If the plug fitted is not suitable for your socket, then the 13 amp plug supplied should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code:

**BLUE: Neutral**  
**BROWN: Live**  
**GREEN & YELLOW: Earth**

As colours in the mains lead may not correspond to the coloured markings in your plug, proceed as follows: Connect the BROWN wire to the terminal marked 'L' or coloured RED, connect the BLUE wire to the terminal marked 'N' or coloured BLACK, and connect the GREEN & YELLOW wire to the terminal marked 'E' or coloured GREEN OR GREEN AND YELLOW. If in doubt, consult a suitably qualified electrician.

#### IG2980 MICROWAVE OVEN – AT A GLANCE

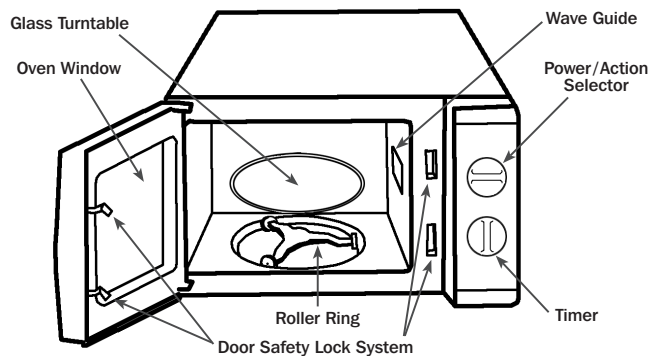

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise the microwave energy will not flow into the oven.

If none of the above rectifies the situation, then contact a qualified technician. Do not try to adjust or repair the oven yourself.

## CONTROL PANEL

The control panel consists of 2 function dials. One is a timer, the other controls power levels.

### Power / Action Selector

You use this dial to choose a cooking power level. It is the first step to start a cooking session.

### Timer Knob

Offers visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

### Microwave Cooking

For pure microwave cooking, there are six power levels from which to choose one as best fit to do the job at hand. Power level increases with the knob turning clockwise.



The power levels can be classified as follows:

Power Output	Description
1	100% HIGH
2	85% MEDIUM HIGH
3	66% MEDIUM
4	48% MEDIUM LOW
5	40% DEFROST
6	17% LOW

Please do not dispose of this appliance into the domestic rubbish bin. It should be taken to the disposal centre provided by your local council.

## OPERATING THE MICROWAVE OVEN

To start a cooking session:

1. Place food in oven and close the door.
2. Turn Power Selector to select a power level.
3. Use Timer dial to set a cooking time

**NOTE:** As soon as timer is turned, the microwave starts cooking. When selecting cooking times of less than two minutes, turn the timer dial past 2 minutes and then return to the desired time.

**Caution:** Always return timer back to zero position if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, open the door by the handle.

## CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if oven gets very dirty. Avoid using spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
4. If it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
5. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

### SPECIFICATION:

Model No: IG2080

Power consumption: 240V~50Hz,  
1200W (microwave)

Rated microwave power output: 800W

Operation frequency: 2450MHz

Outside dimensions (mm):

262(h) x 452(w) x 360(d)

Oven cavity dimensions (mm):

210(h) x 315(w) x 329(d)

Oven capacity: 20 litres

Cooking uniformity: Turntable system

Net weight: 12 kg approx

# IGENIX

800W Microwave Oven  
Model Number: IG2980

## INSTRUCTIONS FOR USE



Thank you for purchasing this product.  
Please read these instructions carefully before using

# IGENIX

Distributed by Igenix, Ipswich IP3 9RR. Tel: 01473 271272