

Thank you

for purchasing your new product. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:




Main Unit

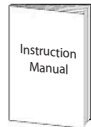

Instruction Manual

Product Overview

1. Toast Slots
2. Toasting Lever
3. **Cancel** Button
4. **Reheat** Button
5. **Defrost** Button
6. Browning Control
7. Crumb Tray
8. Crumb Tray Handle

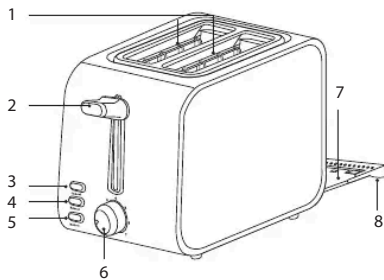

First Time Use

Please note there may be manufacturing residue or oil remaining in the toaster or heating element. Odour may be emitted the first time you use it. This is normal and will not occur after using your toaster several times. The first time you use your toaster we suggest that you operate it without bread.


Toasting Bread

To prevent jamming do not use your toaster with torn slices of bread. Make sure the size and thickness of the bread slices fit easily into the toast slots. Always watch your toaster when in use. Never leave your toaster unattended.

1. Plug the mains plug into the mains socket.


2. Remove all protective wrapping prior to putting the bread into the toaster.

3. Put 1 or 2 slices of bread into the bread slots.

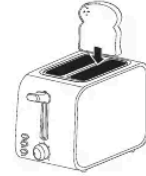

- For optimum browning, always place the bread as close as possible to the centre of the slots.
- Make sure the crumb tray is completely inserted before use.
- Avoid toasting food with extremely runny ingredients such as butter.
- The bread slot is only suitable for toasting regular bread slices.
- Do not toast irregular sized bread.

4. Select the level of browning by turning the Browning Control. There are 7 settings:

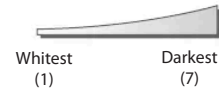

- Select a lower position (i.e. 1 or 2) for light browning, especially for toasting only one slice or for dry (old) bread. Note that the toasting colour for one slice will be darker than that for two slices at the same level.
- Note that the higher browning level, the higher chance of burning the toast.
- If you have initially toasted some bread, the toaster elements will be hot, so when you put some more bread into the toaster it may brown faster than the first slices that were toasted, even if the Browning Control is set to the same level.

5. Lower the toasting lever until it is positioned in place. The toaster will begin at once.



- Only when the toaster is connected to the mains power, can the toasting lever be locked in the downward position.
- During the toasting process, you can observe the toasting colour. Press the **Cancel** button to cancel the operation at any time if you are satisfied with the colour.

6. Once the bread is toasted, the preset browning control will automatically return to the original position. Your toast is ready.

Other Functions

Defrost

Insert the frozen bread into the toaster. Turn the Browning Control to your desired toasting level. Press the **Defrost** button. The **Defrost** indicator will illuminate, and the bread will be toasted.

Reheat

To reheat the toast, turn the Browning Control lever until it reaches the **Reheat** position. The **Reheat** indicator will illuminate, and the toast will be reheated for about 30 seconds.

Cancel

If the toaster starts to toast, press the **Cancel** button.



Lift the crumb tray up about 1 cm.

Removing the Crumb Tray

1. First remove the toaster from the mains socket.
2. Slide the crumb tray out from the bottom of the toaster. The crumb tray will be pushed out.
3. Empty the crumb tray and clean the crumb tray.



- Ensure the toaster is unplugged from the mains power.
- Let the toaster cool down before removing the crumb tray.
- Ensure the crumb tray is completely empty and clean.

